



 


 





 
 

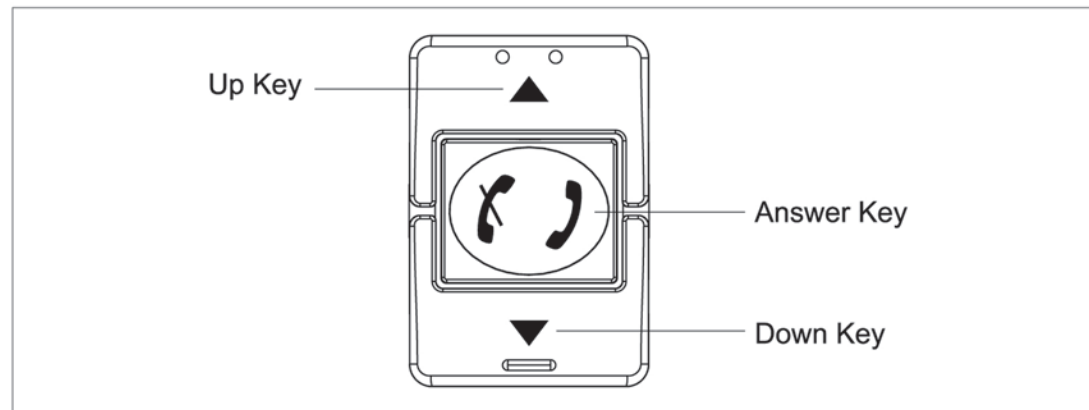 




**ID: Toy-Cam Code: 1234**

	Function	operation	SPEC
1	Turn on	Power up BT	When ACC on, if phones have been paired, the BT kit will search phones which have been paired automatically and speaker will freeback a voice once connected success . (Priority in order is the phone most recently used the system and second most used the system.) If BT kit never been paired with any phones then it will activate pairing system automatically and speaker will have a voice indicator. Phone should be finished pairing then can use BT function. ( Pin code: 1234)
2	Making a call	Use the phone	Under BT standby, you can also use phone to make a call
3	Voice dialing	Press 	Under BT standby, press Answer key to activate voice dial function, once down, phone will show dialing logo and you can use microphone to activate voice dial function
4	Ending a call	Press 	In a call, press Answer key to end a call
5	Answer a call	Press 	Under BT standby, press Answer key to answer incoming call
6	Rejecting a call	Press  → 	Under BT standby, Double click the Answer key (between 0.5 sec) to reject a call
7	Redialing the last number	Press  → 	Press Up Key and Answer key (within 1 second) to redial the last number, at the moment speaker will freeback a voice once success
8	Adjust the volume	Press  or 	In a call, press Up Key to turn volume up and press Down Key to turn volume down. When volume up to the max / min, speaker will freeback a voice back to you.
9	Transfer call	Press  hold 2 sec	BT→Phone : Press Up key hold 2 second Phone→BT : Press Up key hold 2 second

	Function	operation	SPEC
10	Mic mute	Press  hold 2 sec	Mute : Press Down key hold 2 second Un-Mute : Press Down key hold 2 second Automatically Un-Mute after call ends
11	Pairing	Press  + 	Under BT standby, Press both Up key and Down key at the same time. Then you can use phone to activate the pairing. ( Handsfree profile need to operate with BT connection, Headset profile will connect automatically)
12	Manual serching	Press 	After pairing, Handsfree profile phone need to operate with BT connection. You can operate connection via phone or press Answer Key, then BT kit will search the phones which have been paired and speaker will freeback a voice once succss.
13	Reset	Press  +  hold 5 sec	Under BT standby, Press both keys and hold for more than 5 sec to clear the paired register data, speaker will freeback a voice once success. After hearing a successful freeback voice (cancelled all pairing data), you can go ahead with new phone pairing. Handsfree profile phone also need to finish connection process then BT function is working. <b>Suggestion:</b> After running reset function, please also delete cell phone's paired data.



\* For others cell phone Bluetooth setting, please refer your cell phone's user manual.